


# Installing **SUPERSEAL** Dimpled Membrane on a concrete block or brick foundation

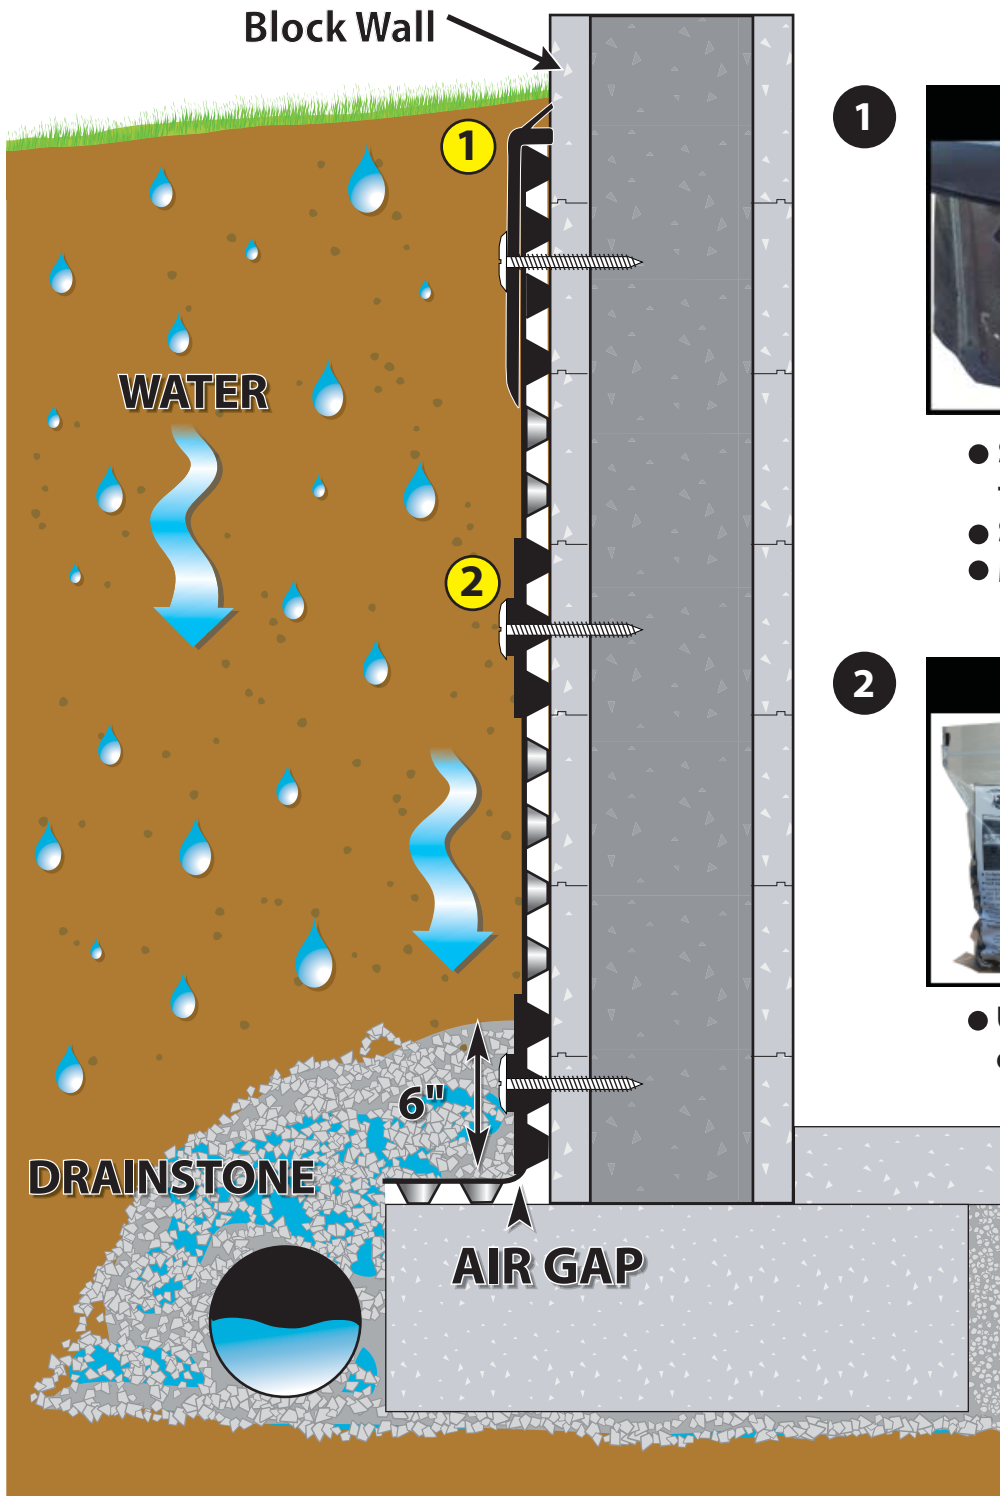

- Seals and locks the membrane to the wall in one step.
- Simple and easy to install.
- Made of tough, long-lasting HDPE



- Used to fasten and lock the body of the membrane to the wall.



- Use Membrane Cap Molding for angles and sloping edges.

When installing SUPERSEAL Dimpled Membrane on a concrete block foundation, always use DimpleGrip Molding for the top and side edges and Super Plugs to fasten the body of the membrane to the wall.

Use 1.5" - 2" Tap Con Screws to fasten to a block or brick wall. Use standard tar based caulking for any seams or overlaps.